


Schoonmaakinstructies

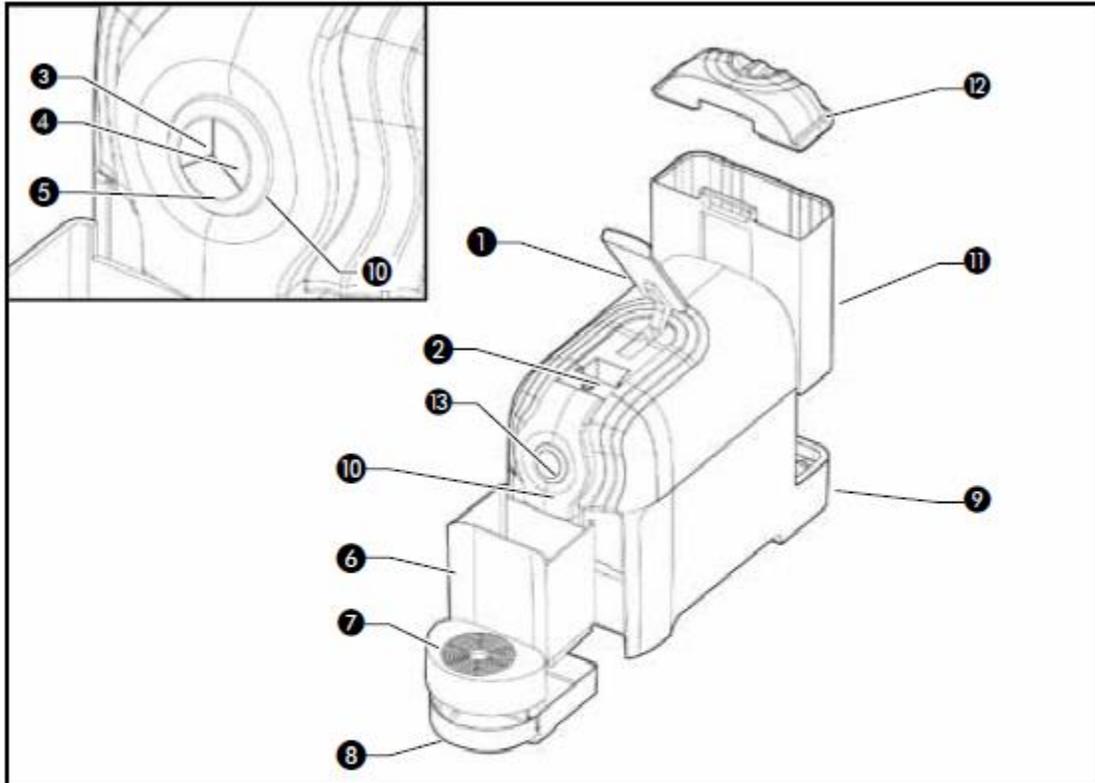

Ref.	Description	Ref.	Description
1	Handle	8	Drip tray
2	Capsule holder	9	Power switch
3	Short coffee button (Dosed version)	10	Indicator
4	Long coffee button (Dosed version)	11	Detachable water tank
5	Free dose coffee button (Dosed version)	12	Water tank cover
6	Capsule collection tray	13	Coffee button (Manual version)
7	Cup holder grid		

CLEANING AFTER USE

Before starting any cleaning operation, unplug the plug from the power socket.

- Empty the capsule collection tray **6** and clean it.
- Clean with a cloth dampened with water and dry thoroughly.
- Always place the machine on degreased and dry surfaces.
- Remove grid **7**, take out and empty drawer/pan **6-8**.
- The capsule holder can be cleaned carrying out an empty coffee cycle, see "Coffee preparation" section.

- Wash every removed part with hot water and kitchenware detergent. Dry thoroughly and refit them.
- Tank ① has to be cleaned weekly with dishes liquid detergent. The water in the tank has to be replaced every day. It is advisable to use good quality water with low mineral content but not de-ionised or distilled water.
 - *Note: the water tank is dishwasher safe.*

Ontkalkingsinstructies

DESCALING

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly. The actual frequency of descaling depends on the local water hardness and the frequency of using the appliance. The general recommendation is to perform this descaling quarterly. The detailed procedure is as follows:

1. Fill the water tank with 0.25l of Evoca descaling product and fill up with fresh water up to the MAX level.
2. If not yet done, switch on the machine with the power button 9 and press any of the brewing buttons 3, 4 or 5 to exit
the stand-by mode: the LED indicator 10 flashes red during warm-up. When the machine is ready, the indicator 10 and the brewing buttons are lit up in white.
3. Place a suitable capacity container on the cup holder grill 7.
4. Discharge any capsule remained in the mechanism by opening and closing handle 1.
5. Press the Caffè Lungo brewing button 5.
6. Wait for 2 minutes.
7. Repeat steps 5 and 6 until the liquid in the tank is exhausted.
8. Rinse the tank and fill it with fresh water. Empty the container placed on the grill and the drip tray 8.
9. Press the Caffè Lungo (Long coffee) brewing button repeatedly for brewing until the water in the tank is exhausted.
10. Refill the tank with fresh water and empty the drip tray 8.
11. The machine is now ready to brew normally.